

S o m b r a j e


Branch Covered Screens

Measuring Openings for Sombraje Shutters

When measuring a window opening for Sombraje shutters, the most important factor is accuracy. Try to measure the opening within 1/16". This will ensure that the panels fit snugly, but that they do not exceed the size of the opening. You do not need to deduct any space for hardware or for spacing between panels; your Ernest Thompson designer will factor this for you when we draft technical drawings for your review.

The **width** of your window or doorway opening should be measured in three (3) places: at the top of the opening, the middle, and the bottom. Please provide **all three measurements** to your Ernest Thompson designer.

The **height** of the opening should also be measured in three (3) places: the left edge, middle, and right edge. Please provide **all three measurements** to your Ernest Thompson designer.

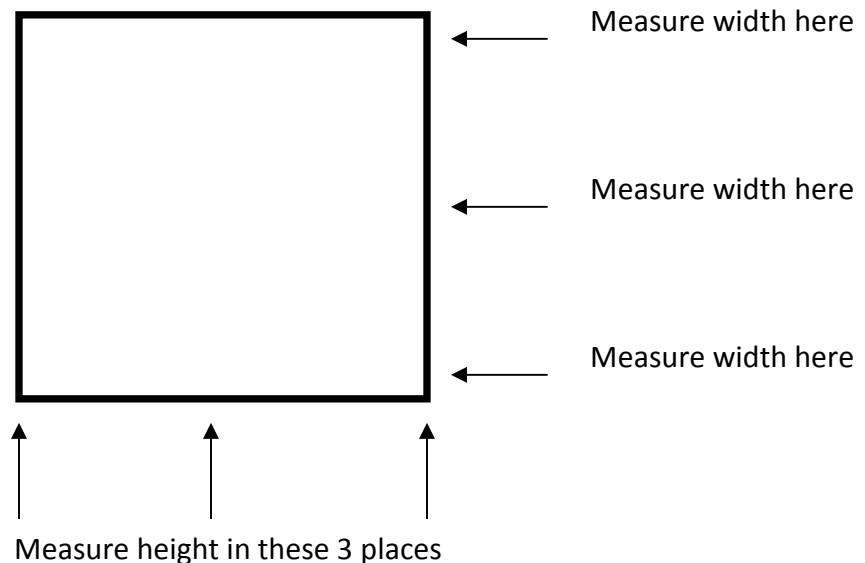

By measuring both the width and the height in three places, you help to ensure that the shutters will fit the opening properly, and that they will not require any trimming in order to install.

Furniture • Cabinets • Sombraje • St. Charles Cabinets • Viking Appliances

4531 Osuna Rd NE • Albuquerque, NM 87109
(505) 344-1994 • FAX (505) 344-1919 • www.ernestthompson.com